


JRE HARDWARE INC

1870 DUFFERIN CRES NANAIMO BC V9S 1H1 (250) 824.5555 WWW.JREHARDWARE.COM MODEL No: Base Shoe - Floor Mount

ISSUED: FEB 2020


REVISED:




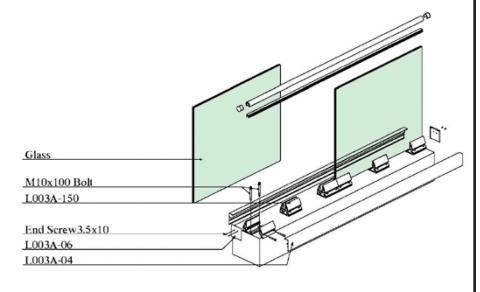






Quick Install Guide

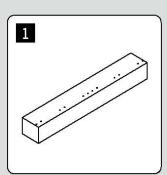


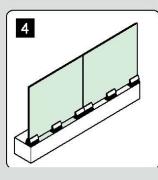

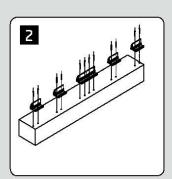

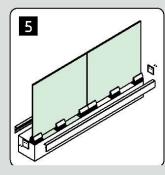

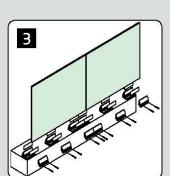

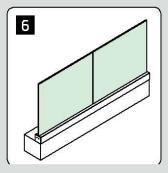



JRE HARDWARE INC


1870 Dufferin Cres Nanaimo BC V9S 1H1 (250) 824.5555 WWW.Jrehardware.com MODEL No: BASE SHOE - FLOOR MOUNT


ISSUED: FEB 2020

REVISED:




L001B-150S

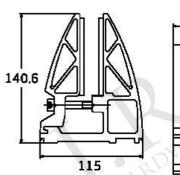

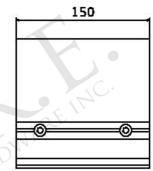



L001A-04 CLADDING

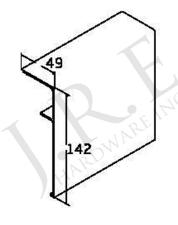



L001A-05 END CAP

